




PIPE TOOLS & VISES
SINCE 1896

CPBVAC Bevel Boss® — инструкция по вакуумному адаптеру

Применимо к: 04675

Указания по сборке и установке

1. Remove the adjusting ring by removing adjusting knob and washer.
2. Place the vacuum box over one of the three horizontal slots depending on the desired location. If vacuum box does not fit in slots, see Special Instructions on reverse side.
3. Place the band around the adjusting ring and attach to the vacuum box with the four screws. Mount the adjusting ring back onto the adapter.
4. Подсоедините к вакуумной коробке собственный шланг пылеудаления.

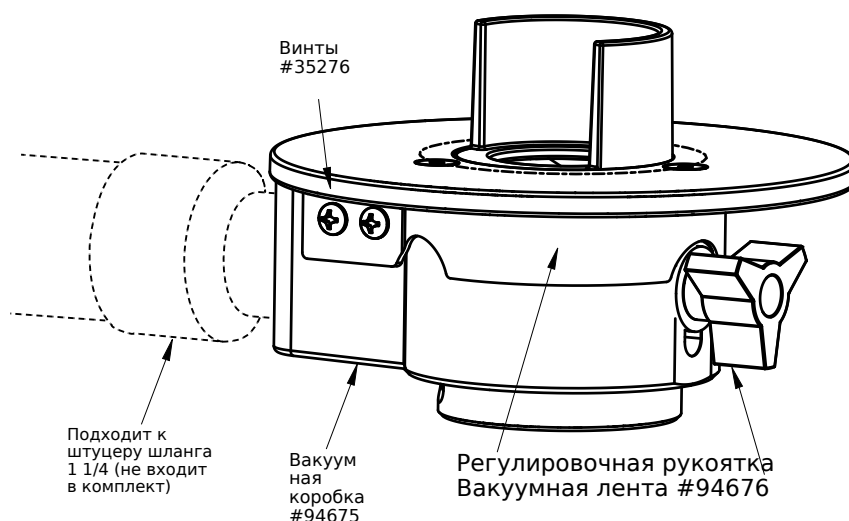

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
& Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

1023-54676




PIPE TOOLS & VISES
SINCE 1896

CPBVAC Bevel Boss® — инструкция по вакуумному адаптеру

Применимо к: 04675

Указания по сборке и установке

1. Remove the adjusting ring by removing adjusting knob and washer.
2. Place the vacuum box over one of the three horizontal slots depending on the desired location. If vacuum box does not fit in slots, see Special Instructions on reverse side.
3. Place the band around the adjusting ring and attach to the vacuum box with the four screws. Mount the adjusting ring back onto the adapter.
4. Подсоедините к вакуумной коробке собственный шланг пылеудаления.

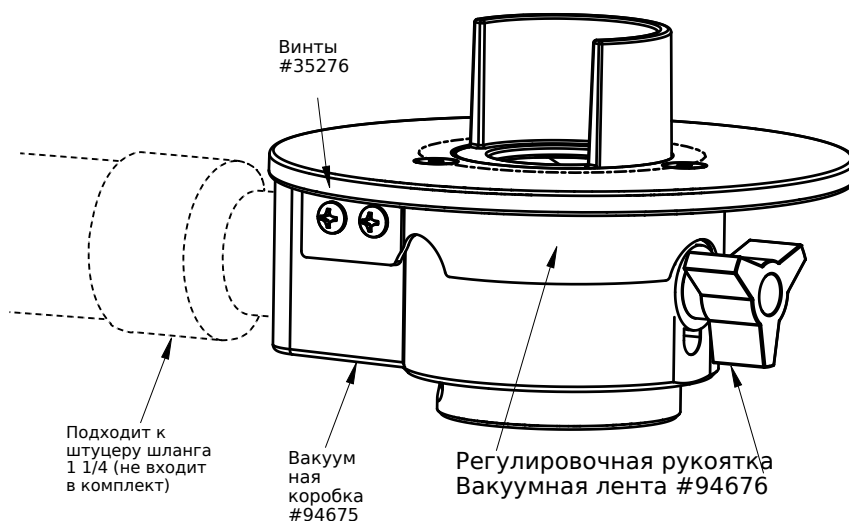

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
& Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

1023-54676




PIPE TOOLS & VISES
SINCE 1896

CPBVAC Bevel Boss® — специальные указания по вакуумному адаптеру


Специальные указания Если вакуумная коробка не входит в пазы Bevel Boss®, действуйте так:

1. Locate the two outer tabs as shown on the figure.
2. Place a flathead screwdriver between the tab and the outer edge of the vacuum box.
3. Приложите усилие и отломите выступы.
4. Proceed with step 3 of **Assembly and Mounting Instructions.**

Note: Older style adapter heads are more likely to require the tab removal

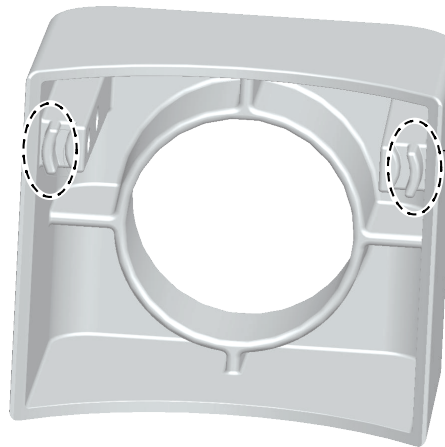

Break off outer left and right tabs if vacuum box does not fit slots in beveler.

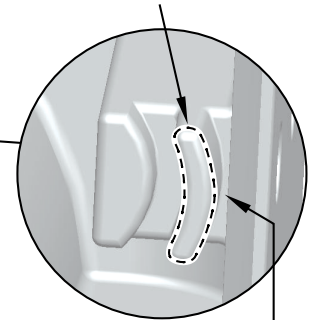

Place flathead screwdriver here

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
& Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

1023-54676




PIPE TOOLS & VISES
SINCE 1896

CPBVAC Bevel Boss® — специальные указания по вакуумному адаптеру


Специальные указания Если вакуумная коробка не входит в пазы Bevel Boss®, действуйте так:

1. Locate the two outer tabs as shown on the figure.
2. Place a flathead screwdriver between the tab and the outer edge of the vacuum box.
3. Приложите усилие и отломите выступы.
4. Proceed with step 3 of **Assembly and Mounting Instructions.**

Примечание: на адаптерных головках старого образца выступы приходится удалять чаще

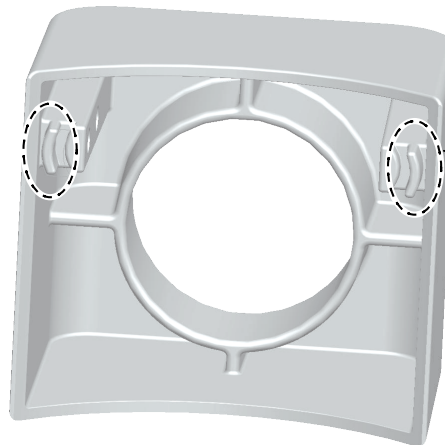

Отломите наружные левый и правый выступы, если вакуумная коробка не входит в пазы машины.

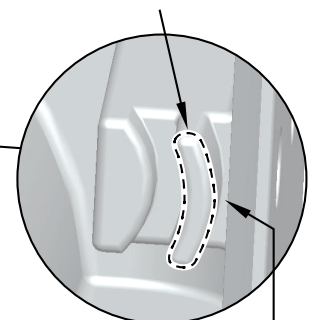

Вставьте плоскую отвёртку сюда

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
& Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

1023-54676